

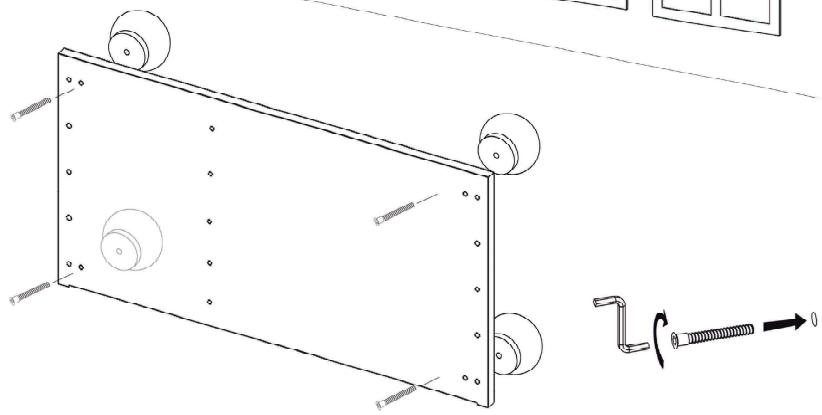
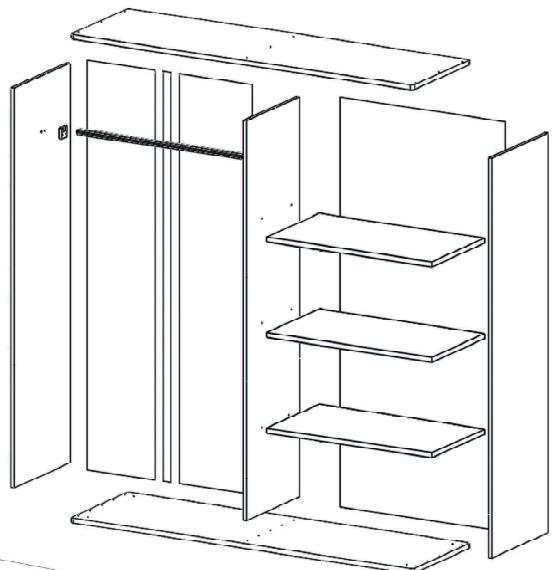


Czas mont. - 90 min.

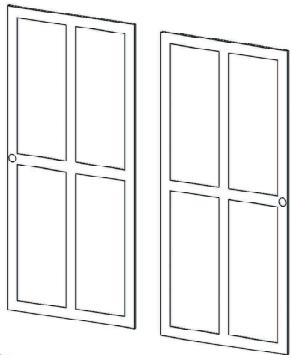


1 8x36 x12	2 L-shaped x1	3 3x16 x12	4 Door hinge x4	5 Door lock x4	6 Door handle x2
7 Door x4	8 Door handle x12	9 3,5x16 x24	10 Door lock x100	11 Door lock x4	12 Spring screw x22




12
Spring screw
x 4


1




2

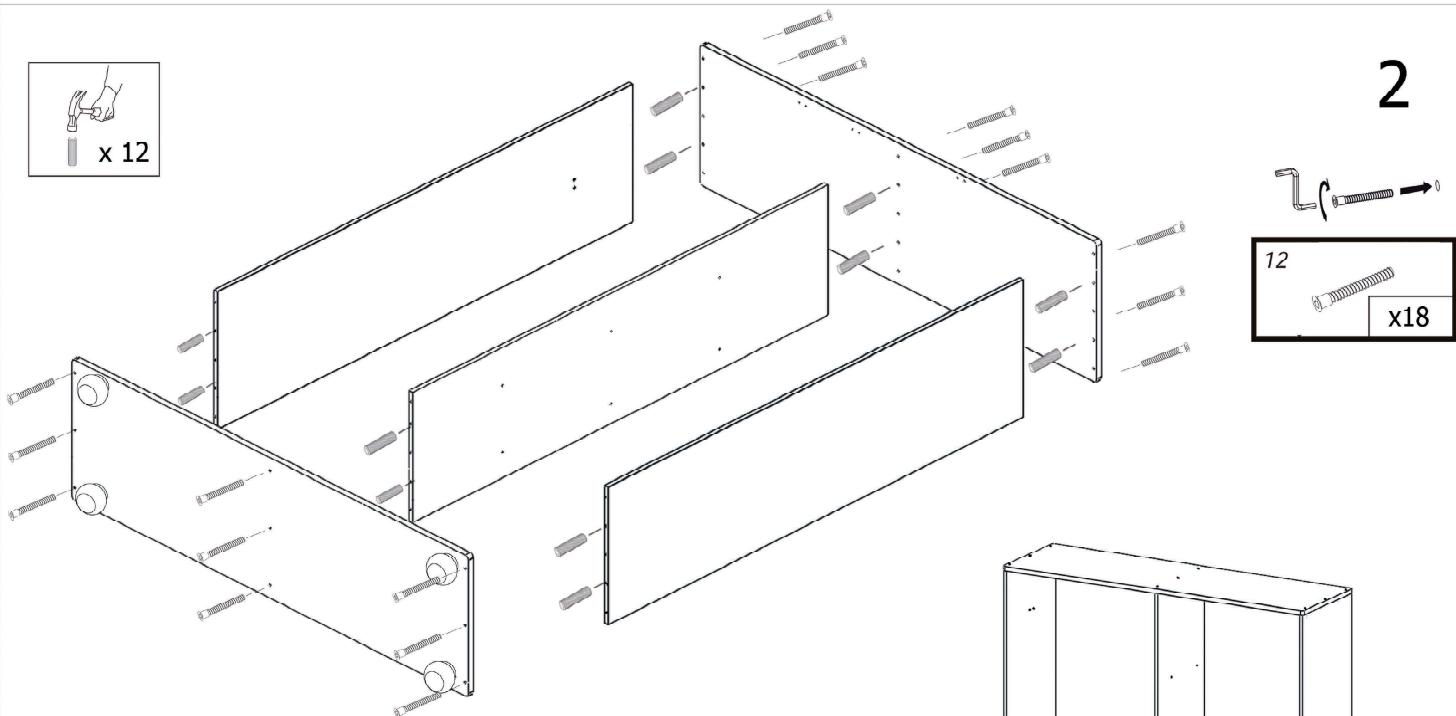


12
Spring screw
x18

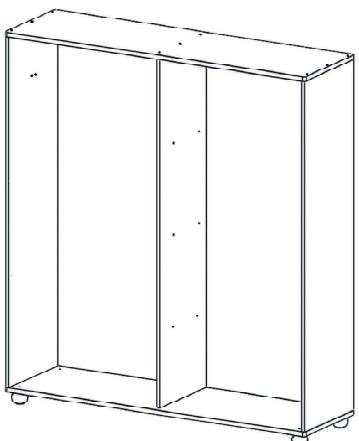


3

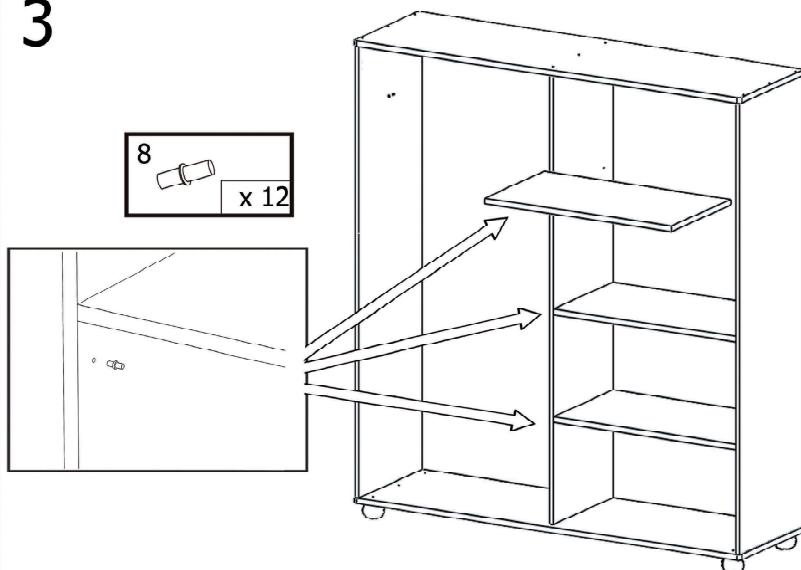


4


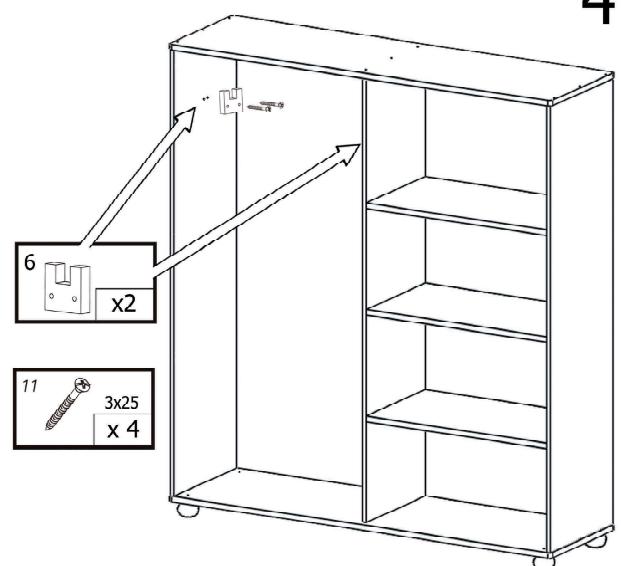


5

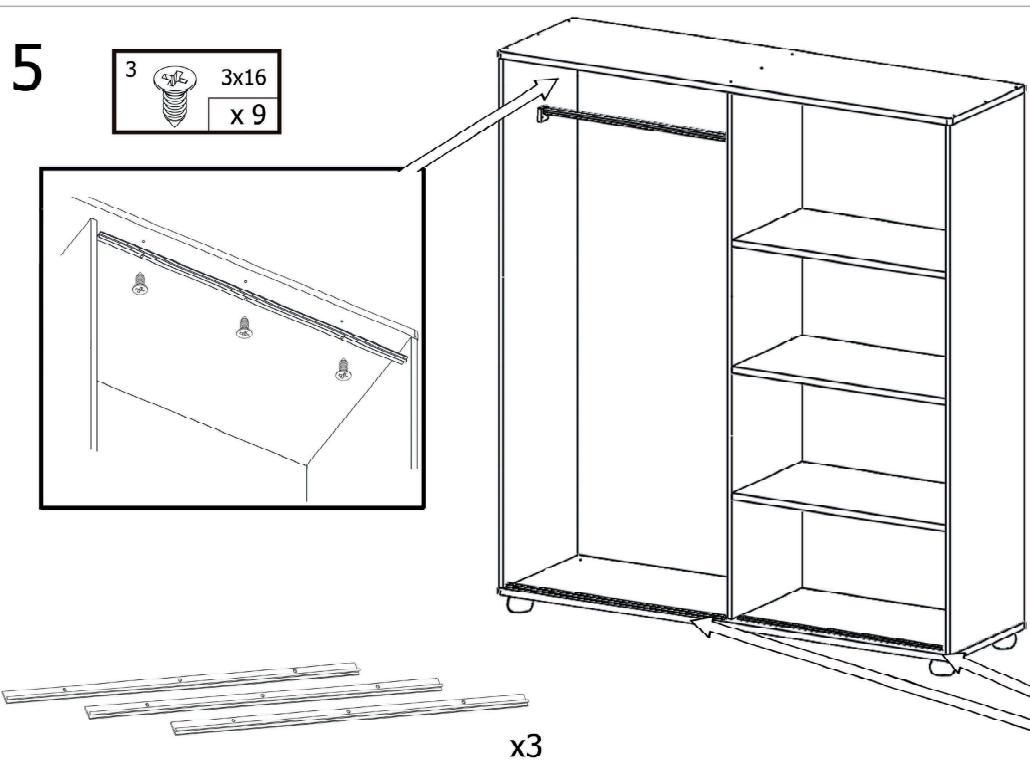



6

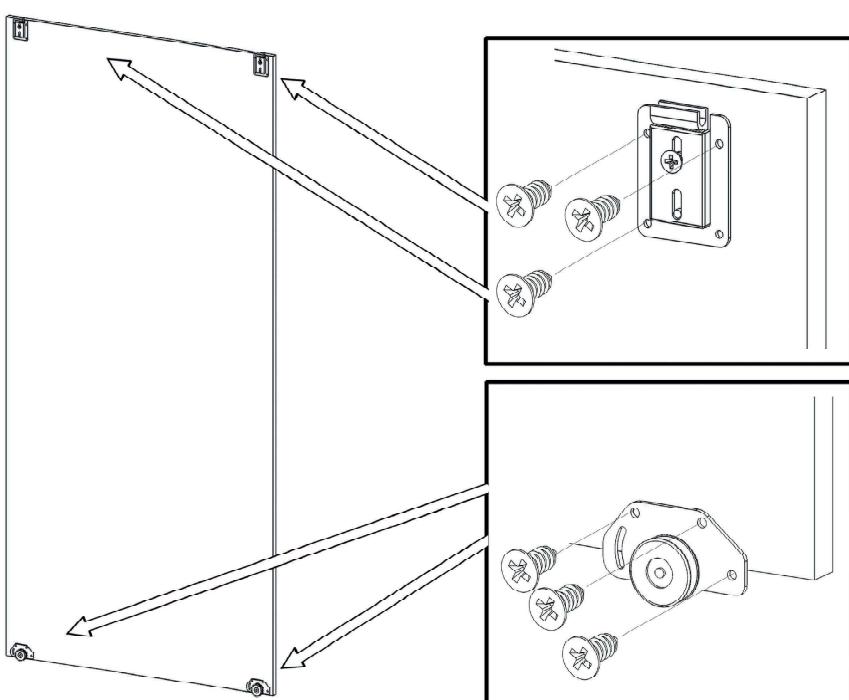

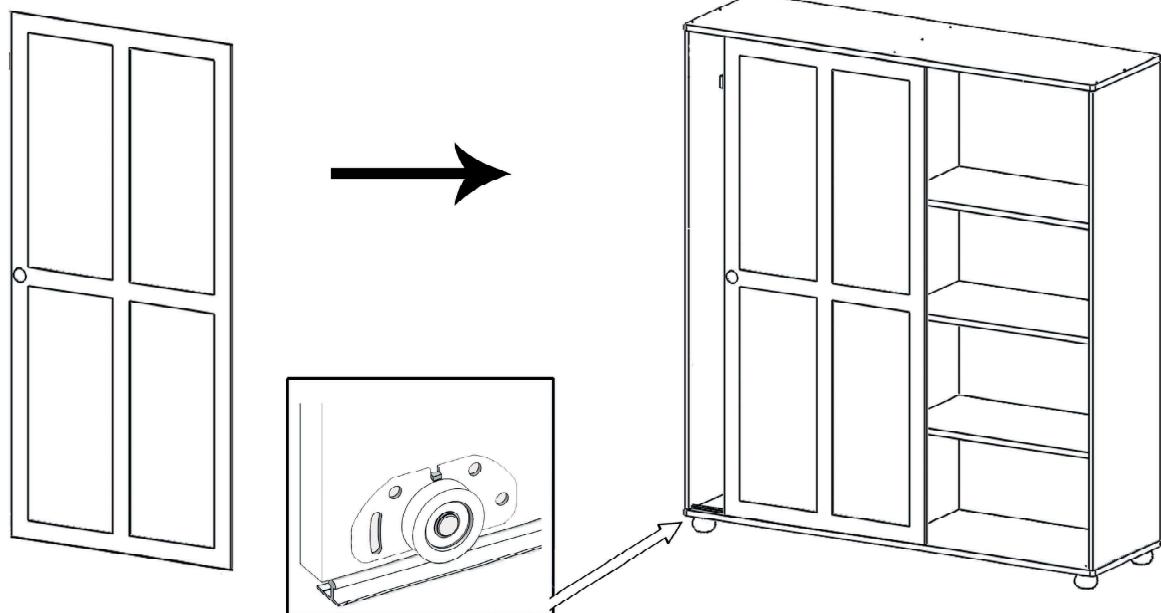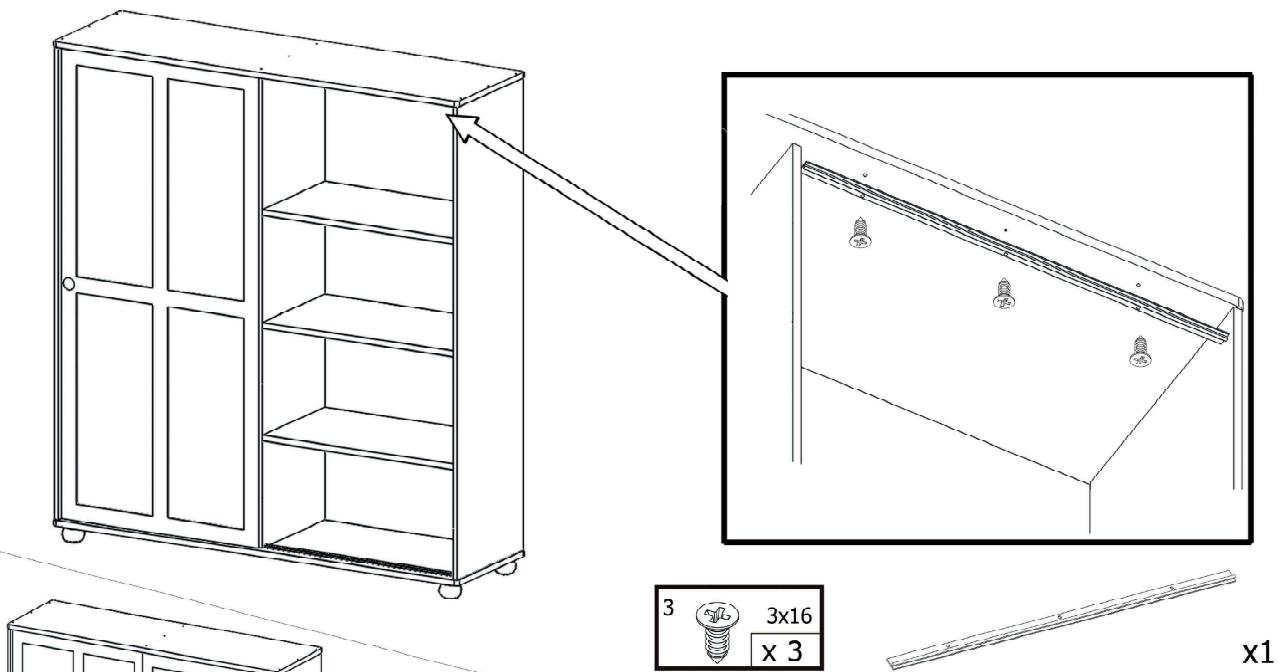7**8**

3	3x16
	x 3

x1

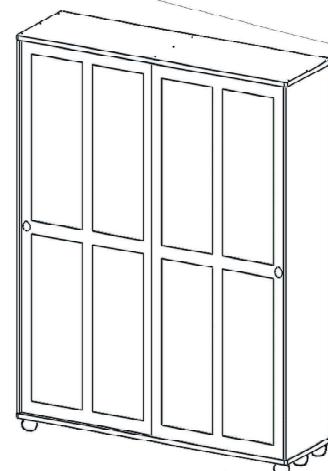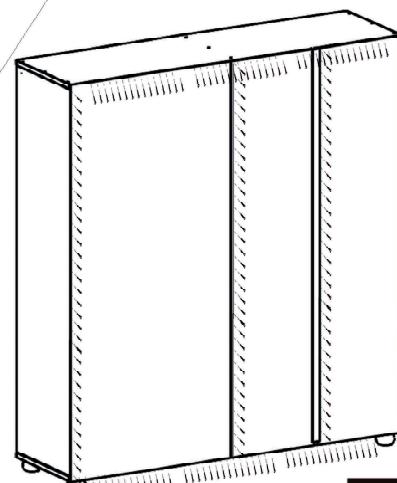9**10**

10
x100

